

# Roady

## User Manual



**XMax<sup>®</sup>**

21+

### BATTERY OPERATION

- Automatically Working While Inhaling
- 2 Draws-Prewarm(1.8V,10S)
- 3 Draws-Toggle Temps
- Long Draws-Inhaling, At Most 10S Single Time

### NOTE!

Please do not put this product away or leave it for extended periods of time with low charge because the battery is lower than 3.3V, the indicator blinks for 10 times, indicating that low battery needs to be charged. If the battery is lower than 3V, the device will stop outputing and shut down after the indicator blinks for 10 times.



For devices with variable temperature settings please use Prewarm Cycle first that is comfortable and safe for your enjoyment.

Step1. Pull out 510 cartridge filled oils (Cartridge not included).

Step2. Screw 510 cartridge to the thread port of battery.

Step3. 2 draws to prewarm 10 Seconds at constant 1.8V; 3 draws to choose right temperature level; Long draws to inhale, single inhalation most 10 Seconds,automatically cut-off over 10 Seconds.



### SPECIFICATIONS

Battery Capacity	500mAh
Charging Voltage/Current	5V/500mAh
Voltage Setting	2.8V-4.0V
Voltage Indicator Light	4 levels(2.8V-Light up one light/3.2V-Light up two lights/3.6V-Light up three lights/4.0V-Light up four lights)
Pre-heating Time	Draw 2 times consecutively to directly activate pre-heat function. Pre-warm 10S at constant 1.8V
Thread	510
Size	53.65*28.2mm(2.09*1.1inch)
Charging Time	1.5 hours
Low Voltage Warning	Indicator flashes 10 times

1. Used for oils
2. 510-thread
3. Adjustable voltage setting